Wildlife Materials International, Inc.

TRX-1000S and TRX-2000S Receivers

TO CHANGE BATTERY PACK:

After your warranty has expired, a battery pack can be changed at home. (When the receiver is under warranty, we change the battery at our facility, and then charge it, retune and recalibrate it to insure excellent performance.)

INSTRUCTIONS: *PLEASE READ BEFORE ACTING*

1) Remove 4 screws (at **left upper** and **lower** edge of faceplate; at **right upper** and **lower** edge of plate) from faceplate.

MOVE SLOWLY and GRADUALLY

2) Lift the faceplate off: grasp Antenna jack at left of faceplate, tilt the right side of faceplate HIGHER. (DO NOT TOUCH <u>circuit boards</u>. The receiver is tightly packed with components. **Observe placement of wires**--they must be returned to the correct place; otherwise shorted and burned wires can result.)

3) Battery pack is at **right** as you look into receiver. Unplug the Molex connector of old battery pack. DO NOT PUT LUBRICANT on MOLEX CONNECTOR! To lift old battery out, you may need to unscrew/loosen battery holder at **right** <u>outside</u> of box.

4) Plug in the Molex connector of new battery pack, fit into battery holder and tighten outside screw. **Make sure you return the battery plug with cable to the correct place.** This will avoid problems!

5) To fit faceplate on, lower <u>left</u> side of faceplate first; then lower <u>right</u> side of faceplate. Tighten screws at the four corners of faceplate. DO NOT PINCH WIRE BETWEEN faceplate and "L" brackets.

6) CHARGE BATTERY FOR 16 TO 24 HOURS.

7) Test receiver. Hopefully it will not need to be retuned or recalibrated.

WARNING: Batteries installed incorrectly can cause wiring to burn up and/or batteries to explode. Be sure wires are not crimped when you put unit back together.

Wildlife Materials International, Inc. 1202 Walnut Street Murphysboro, IL 62966 USA Phone: 1-800-842-4537 FAX: 618-687-3539 FIVE-YEAR WARRANTY on ELECTRONICS