



RECHARGEABLE #3700 & 3310 TRANSMITTER COLLARS

Data:

- This battery is upgraded to 3-stage power, using our next generation Magnum circuit board. This translates into longer signal range and a more trackable signal.

NOTE- This equipment is designed to help you locate dogs after the hunt. As you know, any electrical equipment, especially if battery-powered, may stop working. Theft, accidents and Acts of God also occur. Wildlife Materials, Int. cannot assume responsibility for dogs that are lost or injured while being monitored.

Operation: Please see the "Operation & Tips For Your Radio Recovery Equipment" sheet for general operating instructions.

Directions for use:

1. To start the transmitter signal remove the magnet from the recessed slot at the back of the transmitter. Just pull the white tab/tape attached to the magnet. The power will go on.
2. Before hunting, tighten the transmitter antenna and battery cap. Check cable connections between receiver and antenna. Make sure the collar screw securely hold collar to transmitter. This avoids loss in the field.
3. Turn on your receiver and set the correct channel. You will want to attach your antenna cable to the receiver after you are positioned at least 20 yards from your transmitter collar.
4. One recharge unit has been sent with each rechargeable transmitter collar. Also included are two plastic red stoppers placed in the two banana recharge jacks on the inner side of the collar. The two stoppers will keep dirt out. Remove the plugs when charging.
5. At the time of shipment, rechargeable transmitters have been fully charged. If the transmitter battery is completely down for some reason, charge for a full 20-24 hours. Never charge for more than 24 hours. Do NOT remove magnet while charging. A fully charged 3700 collar should work for 11-13 days. A fully charged 3310 collar should work for 8-10 days
6. After each usage, stop the transmitter by positioning the magnet on the red-marked slot at the front of the transmitter. If it does not turn off automatically, try moving the magnet in any direction until the transmitter deactivates.



Long-Term use:

- To charge a transmitter, remove the two red stoppers that are placed in the colored jacks at the back of the transmitter collar. Inset the recharge unit's plugs into the colored jacks at the back; the transmitter's red jack receives the recharge unit's red plug and the transmitter's black jack receives the recharge unit's black plug. Then start the power supply by plugging the charger into a wall socket. A red light will signify charge. There is no way to signal when the process is complete, YOU must keep track of how long the unit is charging.
- When not in use, store your transmitter in a cool, dry place with the elasticized magnet attached to the transmitter's front recessed slot. If storing more than one transmitter, make sure that the magnets do NOT touch.
- Keep another magnet on hand for battery conservation. Magnets are easily lost in the field and can be difficult to purchase elsewhere.
- To change a broken antenna, just unscrew the old one, insert the new one and tighten down. Replaceable antennas cost \$7.00 each.
- The power will go flat in lithium battery-powered collars that are not used for long periods. To avoid this, exercise the battery by turning it on for 8-10 hours once a month.

Trial and Warranty:

- All equipment comes with a 15-day trial period. If you wish to return an item, please contact us and ship back in like-new condition.
- There is a FIVE-YEAR WARRANTY on Parts & Labor on ELECTRONICS.
- Contact us for more details.

Wildlife Materials Int. shall not be liable for any loss or damage resulting directly or indirectly, as a consequence of or incidental to, the use or loss of any Wildlife Materials product including, without limitation, the original purchaser's expensed associated with downtime, interrupted or lost data, or damages to persons, animals or property.

WILDLIFE MATERIALS International

1301 Autumn Ridge Road, Carbondale, IL 62902 USA
TEL (618) 549-6330, (800) 842-4537 FAX (618) 457-3340