

### TRX – 3S RECEIVER UNIQUE INFORMATION

#### Data:

- This 3-channel receiver is the economy model in our TRX family of modern receivers. It will monitor up to 3 transmitter wearers.
- This is lightweight at only 14 ounces.
- It can be mounted on a 3-element directional yagi antenna.
- The receiver comes with rechargeable nicad batteries, a recharger and a DC power cord for operation from a vehicle. You may also use disposable AAA batteries. These batteries should last 14-15 hours.
- The TRX-3S is <u>NOT waterproof</u>. In rain, snow, fog, etc., please <u>cover</u> the receiver, or use it <u>only inside</u> a vehicle. Water inside the receiver will void the warranty.

**Operation:** Please see the "Operation & Tips For Your Radio Recovery Equipment" sheet for general operating instructions.

# **Unique Instructions:**

- 1. Start the **transmitter's** signal by <u>removing</u> the magnet, or by <u>inserting</u> the batteries. Turn on the **receiver's** power switch (PWR,) located at the center of the face.
- 2. <u>Select</u> the channel on which this transmitter broadcasts. Use the switch marked CH to choose channels A, B or C. To determine which transmitter comes in on each channel, <u>look</u> at the chart taped to your receiver. Each channel will be listed along with its frequency range. For best reception, we have programmed your transmitter's unique frequency number close to the center of the channel. Use the TUNE knob at the right to bring in the signal that is best for your ear.
- 3. The beeping signal you hear will match the lights on the LED bar located at top center of the **receiver** face. The LED bar shows you the signal strength. As the flashing red lights move further right, you are getting closer to the transmitter wearer. HOWEVER, to be effective, the lights do not need to bounce to the far right. If you keep the gain/volume control low, the light bar will only move right a few steps.
- 4. Remember to keep the volume as low as possible. High volume drains the battery, causes distortion and make pinpointing more difficult.
- 5. To <u>connect</u> your **antenna cable** to the antenna jack on the back of your receiver, <u>push</u> the connector <u>in</u> and <u>clockwise to the right</u>.
- 6. If background noise can be heard, use an earphone plugged into the PHONE jack on the receiver face. IMPORTANT- the proper sized plug should be used. Foreign-made earphones for radios and tape players do NOT work well. Wildlife Materials supplies earphones for this purpose.
- 7. If using the **attenuator** switch at the back of the **receiver** to counter "swamping," be sure to <u>turn off</u> the attenuator <u>after</u> the transmitter collar moves back to a greater distance. Otherwise, you may receive no signal at all.



# Long-Term use:

- To conserve battery power, turn the receiver off after taking a reading.
- To change the disposable batteries, unscrew the 4 black knobs at the back of the receiver to open the lid. Unplug the Molex connector. Remove tray and replace batteries. Be sure to match the positive and negative polarity marks on the tray. Replug Molex connector ends, replace lid and tighten black knobs.
- During long-term storage, remove batteries to avoid rusting and corrosion. Failure to do so could void warranty.
- The rechargeable TRX-3S has been shipped at full charge which lasts for about 6 hours of tracking. To charge, turn power switch off. Insert recharger plug into the recharge jack at the back of the upper left side. A fully discharged receiver should be charged at least 16 hgours but no more than 24 hours.
- After the receiver is fully charged, users should recharge 4 hours for each hour of operation, up to 24 hours.
- Vary recharge times to avoid a "memory buildup." If you recharge 4 hours each time, the battery will gradually become good for only 4 hours of life. Avoid a recharge pattern to the most out of your battery. For instance, if you charge for 4 hours one time, use your unit until a charge of 8 or 12 etc. hours is required next.
- To operate a rechargeable receive off a vehicle battery, insert the DC Power Cord's plug into the jack (the same as used for recharger,) at back left side of receiver. Plug the other end into the vehicle's cigarette lighter holder.
- During long storage periods, stimulate the rechargeable battery by turning on receiver every 3-4 month. Run for 3-4 hours, then recharge for 12 to 16 hours.

## **Trial and Warranty:**

- All equipment comes with a 15-day trial period. If you wish to return an item, please contact us and ship back in like-new condition.
- There is a FIVE-YEAR WARRANTY on Parts & Labor on ELECTRONICS.
- When returning for repair, please ship insured.
- Describe the malfunction in detail so that technicians can quickly address the problem. This will save you time and keep our repair costs low.
- Contact us for more details.

Wildlife Materials Int. shall not be liable for any loss or damage resulting directly or indirectly, as a consequence of or incidental to, the use or loss of any Wildlife Materials product including, without limitation, the original purchaser's expensed associated with downtime, interrupted or lost data, or damages to persons, animals or property.

### **Wildlife Materials International**

1202 Walnut Street; Murphysboro, IL 62966 USA TEL (618) 687-3505, (800) 842-4537 FAX (618) 687-3539